


Steps to Re-key a Safe Lock Cylinder

1. Place knob or lever in unlocked position.
2. Rotate the knob or lever 45 degrees clockwise to align the hole with the catch.



3. Use the emergency/removal tool included in the box to push down the catch inside the hole while forcing the knob or lever assembly off the catch.

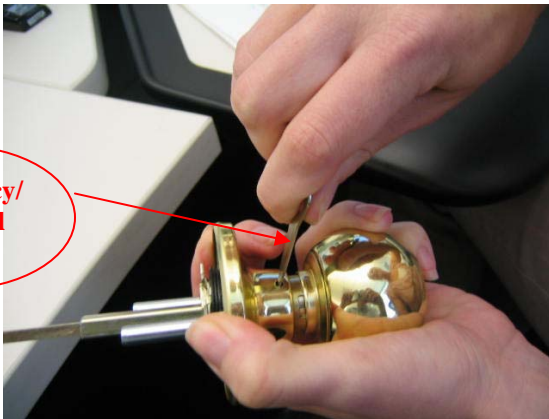

4. Remove knob or lever assembly off the shank.



5. Remove collar. Do not remove alignment spring.



6. Remove cylinder from knob.

